


Jouplast®

USING PROFILDECK® TO CREATE A PAVED TERRACE

SPECIAL APPLICATIONS

BLOCKING TILES AT THE EDGE OF THE TERRACE

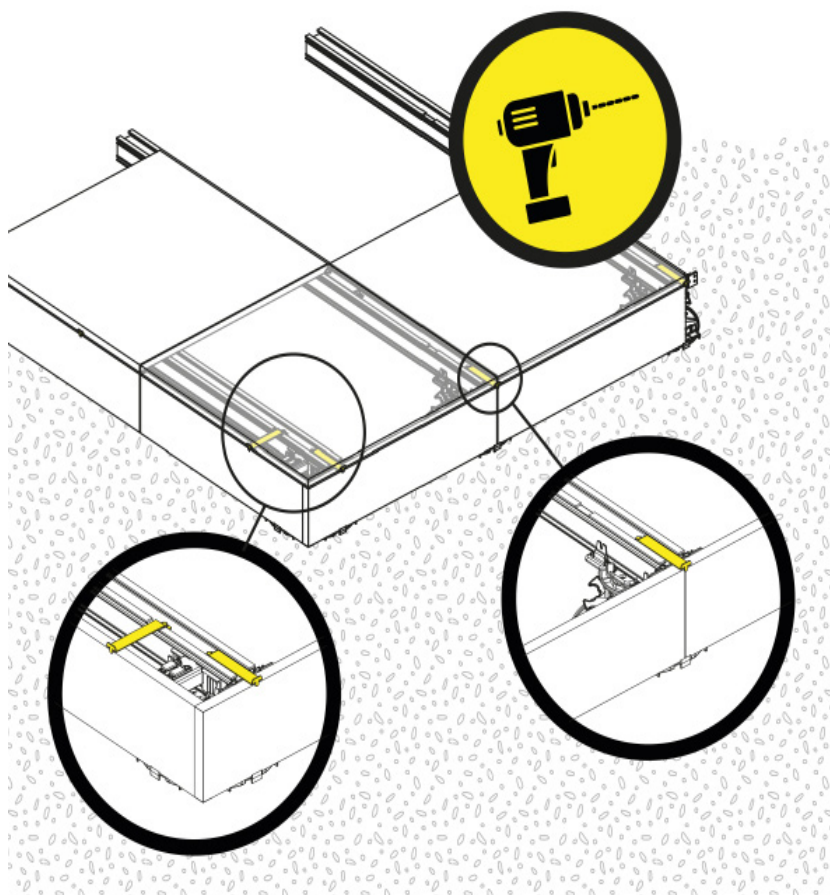

If required, tiles at the edge of the terrace can be held in place using the tile stop piece (see diagram opposite).

Screw the piece into the Profildeck® joist using a structural screw.

There should be a tile stop piece at each tile junction, and two pieces for a corner.