

Finish the edges using the clip-on finishing profiles & PROFILDECK® - Height 55 mm


Jouplast®

What profile height should you choose?

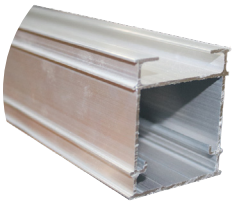


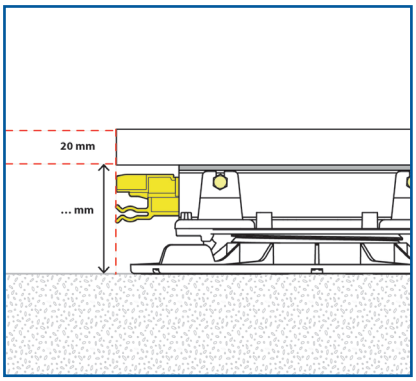

= ... mm	50 mm	60 mm	70 mm	80 mm	90 mm	100 mm	110 mm	120 mm	130 mm	140 mm	150 mm
Hauteur Height Höhe Altezza Altura Hoogte	70										
				100							
								140			

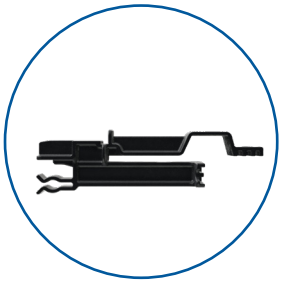

Before starting, allow for the necessary recesses at the end and along the aluminium joist to accomodate the securing clip.

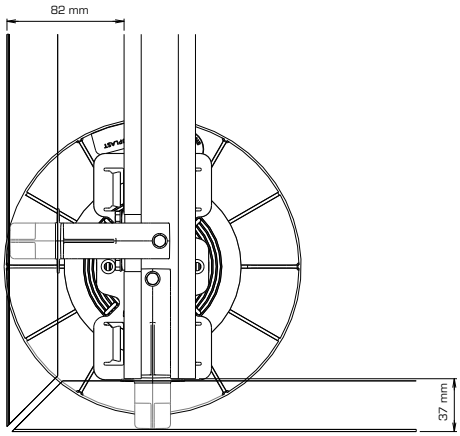


FOR JOIST LENGTH FINISHING


- At the end of the joist, allow for a 37 mm recess to accomodate the fixing clip.


- Insert the securing clip into the Profildeck® aluminium joist rail and use a Profildeck® structural screw to secure it in place.

- Set out the finishing profiles to plan for cuts, straight connectors and corner connectors.

- Tilt the profile forward slightly to locate it in the clip, finish by clipping the entire system firmly in place.

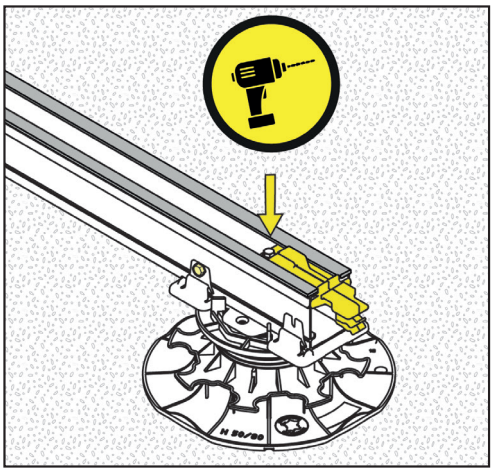

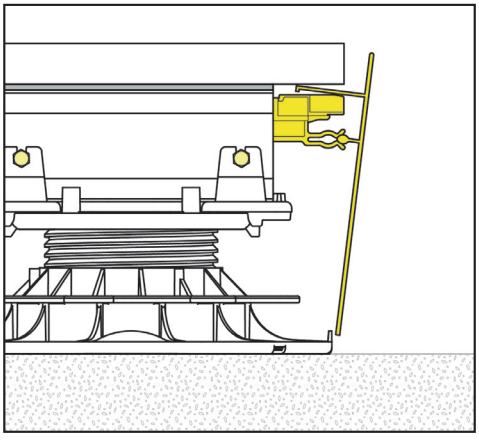

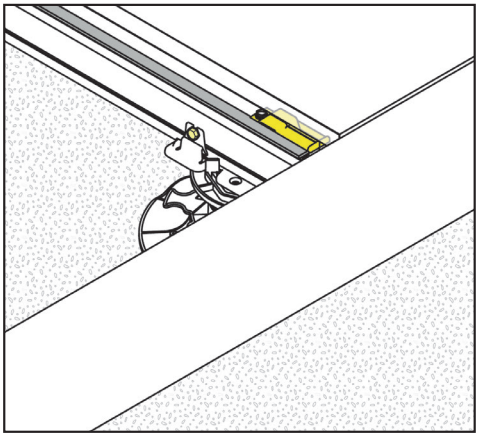


FOR JOIST LENGTH FINISHING

• Along the joist, allow for a 82 mm recess to accomodate the fixing clip.

• Cut the rubber tape around the location of the securing clip, then apply it to the Profildeck® joist rail, as shown in the diagram opposite.


• Begin by securing the clip to the rail using 2 Profildeck® structural screws at the base.

• Then secure the top of the clip with another screw.

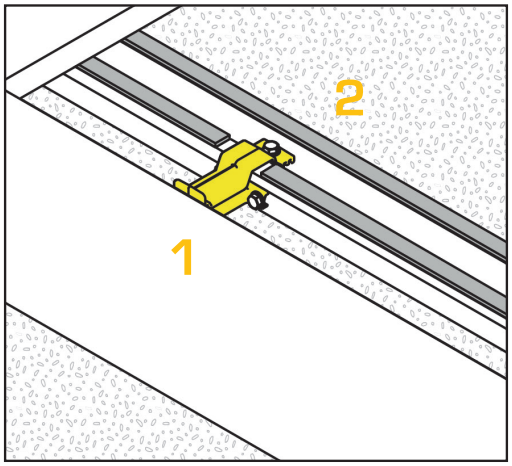


USING STRAIGHT CONNECTORS


• When joining 2 profiles, use a straight connector.

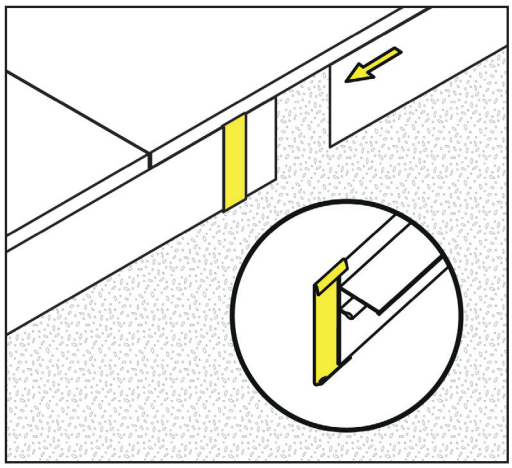

• Clip on the 2nd profile and slide the end into the straight connector.

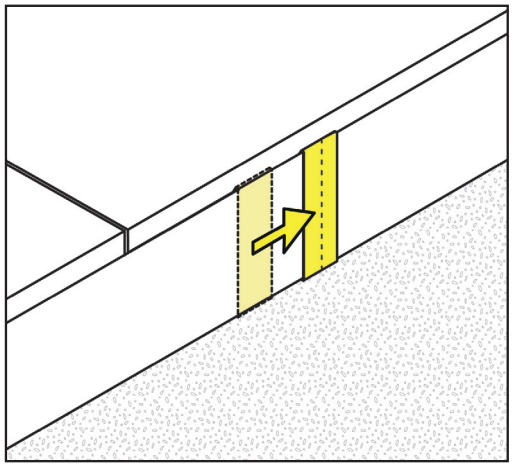


• Finish by clipping the entire system firmly in place.

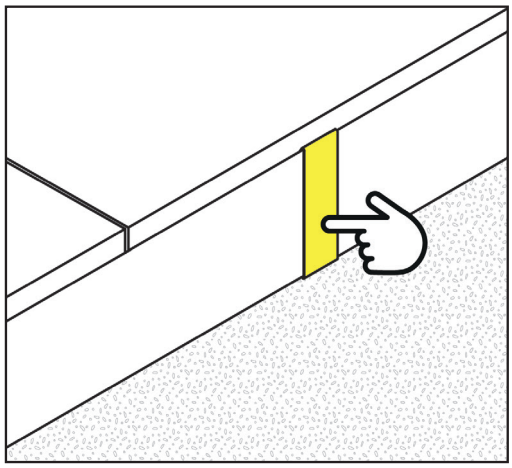


CREATING AN EXTERNAL CORNER


• When cladding corners, use 2 securing clips. One inserted at the end of the joist, the other located on the side of the joist rail (Cut the rubber tape around the location of the securing clip), as shown in the diagram opposite.

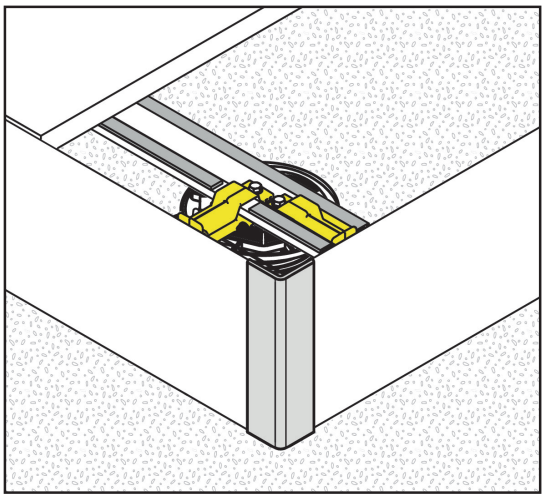


• Cut the tab of each profile fixing tab at 45°.

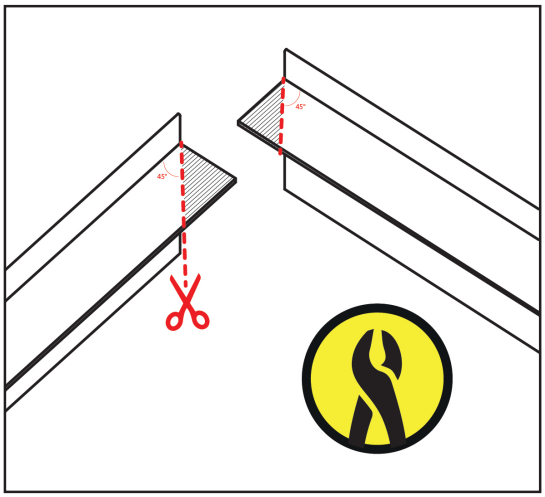

• Attach the corner fitting to the profile. Lightly pre-fold the corner securing tabs.

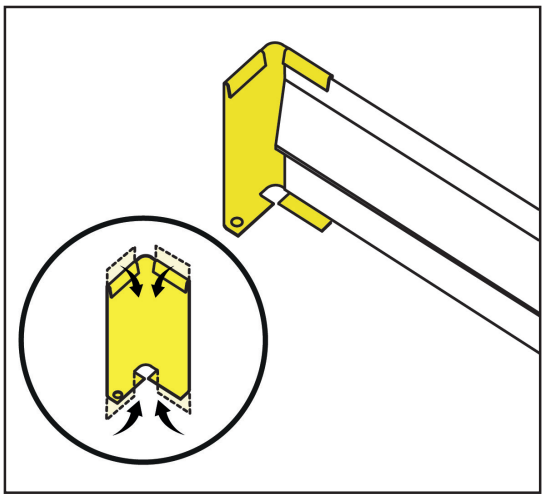


• Tilt the profile forward slightly to locate it in the clip.

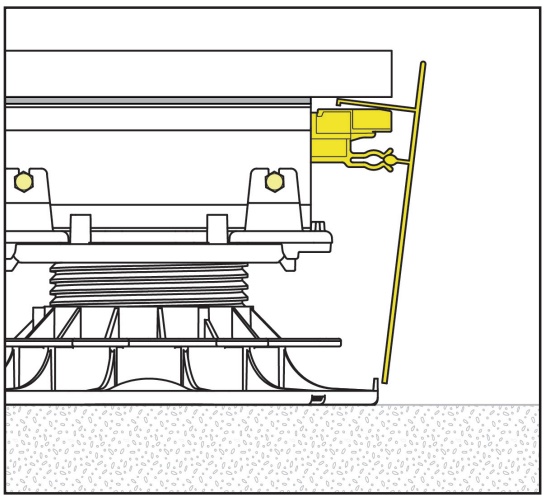


CREATING AN EXTERNAL CORNER

- Pull it slightly forward to make it easier to fit the 2nd profile.

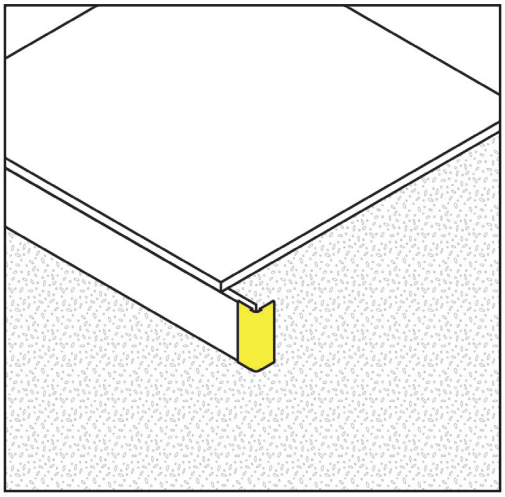

- Insert the 2nd profile into the external corner connector.

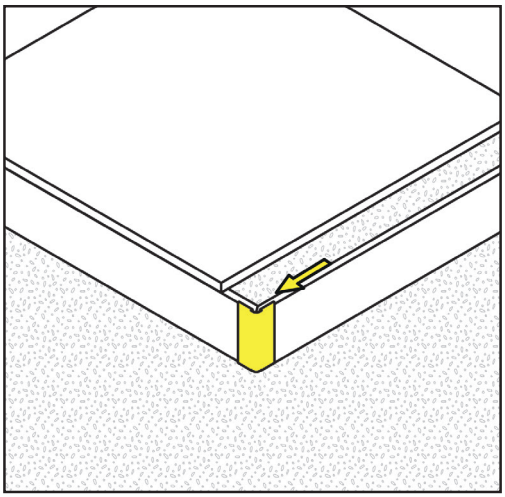

- Finish by clipping the entire system firmly in place.

