LAYING YOUR WOODEN DECKING WITH FIXEGO®

FOR USE WITH WOODEN DECKING BOARDS WIDER THAN 150 MM

INSTALLATION WITH ADJOINING BOARDS

1

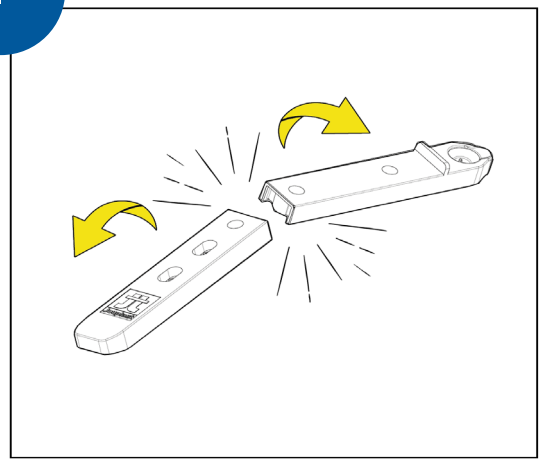

Break Fixego® in half.

Provide 5 screws instead of 3 usually.

2

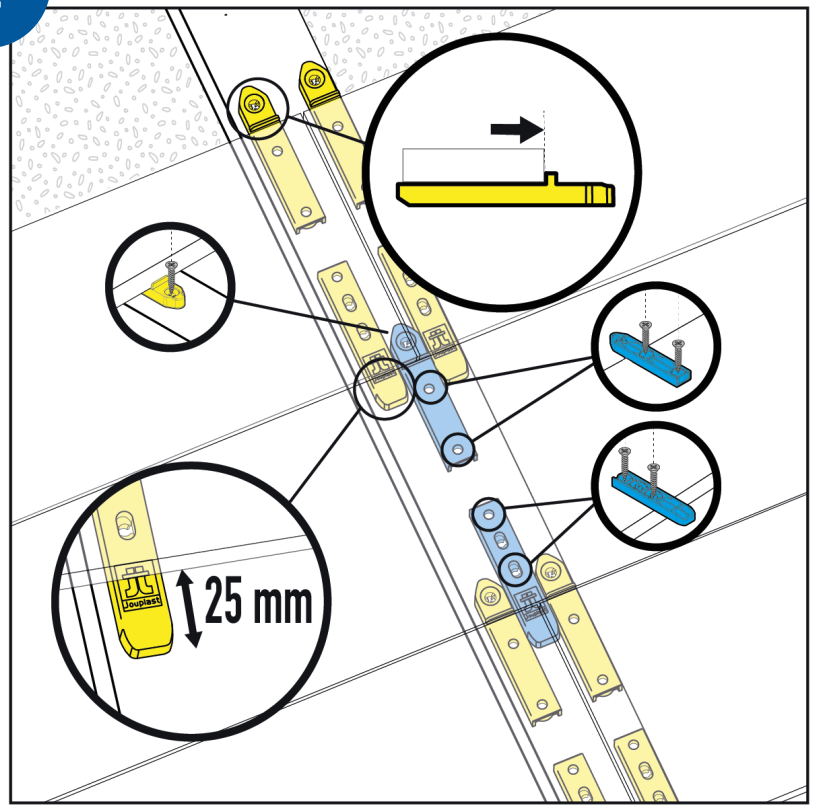

Position the half-fixing as shown in the diagram.